



# POWERCOCKS

## USER GUIDE

### GETTING STARTED

 
1. Before first use, charge your device for approximately 2 hours. The USB charging cable can be plugged into any USB port or USB/AC power adapter (not included).

- Charging = LED Light Flashing
- Charged = LED Light Solid





2. Wash your device with soap and water, or toy cleaner suitable for use with silicone items.

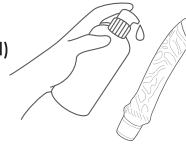
3. Lubricate your device (if needed) with a water-based, silicone compatible lubricant.




4. Our products are designed to be waterproof. Your device can be used in the shower and can be run under water in the sink to be cleaned. Never immerse your device in water.

### TRAVEL LOCK

 To enable the travel lock, press and hold the  button for 3 seconds while the device is off. The LED-indicator will flash twice indicating that the device is locked. To disable the travel lock, press and hold the  button for 3 seconds. The LED-indicator will flash twice indicating that the device is now unlocked and ready for use.

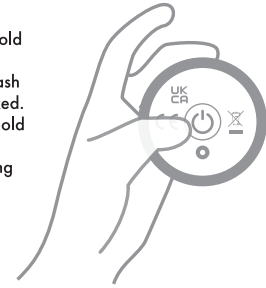

### CONTROLS BASE OF DEVICE

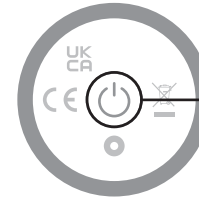 

**3 Vibration Speeds,  
4 Vibration Patterns**  
Cycle through 7 unique vibration (3 speeds, 4 patterns) functions for a unique experience.

### WARRANTY INFORMATION

POWERCOCKS provides a 3-year warranty from the purchase date on the purchase receipt. This warranty is supplementary to the warranty rights in the state of purchase. The warranty covers the function of the product. It does not include external damages due to normal wear or accident-related damage, misuse or negligence. The warranty does not apply in the event of failure to observe the operating or assembly instructions. Any battery pack included in the delivery is explicitly excluded from the warranty. The validity of the warranty expires in case of improper use or tampering.

Open to everyone who has purchased a POWERCOCKS device, if you find your product is faulty outside the warranty period, or you have lost your proof of purchase you can claim on this warranty. You will then be entitled to a 50% discount on [www.powercocks.com](http://www.powercocks.com) for the purchase of a new device, limited for one-time use only.

To enforce the warranty claim, please return any problematic items still under warranty with the original purchase receipt to [cs@powercocks.com](mailto:cs@powercocks.com) for a return authorization.

### DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

For other user guides in multiple languages please visit:  
[www.powercocks.com](http://www.powercocks.com)

Email us at [cs@powercocks.com](mailto:cs@powercocks.com) for any unanswered questions

### SPECIFICATIONS

#### Materials

100% Body-Safe Silicone & ABS Plastic

#### Dimensions

- **8" Girthy Realistic Vibrator (PC-001)**  
256g 54.5mm x 54.5mm x 245mm
- **7" Slim Anal Realistic Vibrator (PC-002)**  
175g 46.5mm x 46.5mm x 205mm
- **6.5" Realistic Vibrator (PC-003)**  
205g 40mm x 40mm x 195mm
- **6" Realistic Vibrator (PC-004)**  
166g 46mm x 46mm x 175mm
- **7" Realistic Vibrator with Clitoral Stimulator (PC-005)**  
260g 65mm x 57mm x 213mm
- **7" Realistic Vibrator (PC-006)**  
180g 63mm x 42mm x 210mm

#### Charging Time

2 hours

#### Use Time

Up to 90 mins

#### Battery Type

Lithium Battery (FB14500/3.7V/800mAh)

#### Vibration Modes

3 speeds, 4 patterns

#### Noise Level

Less than 68db (5cm distance)

### VIBRATION PATTERNS

